
 


Removing

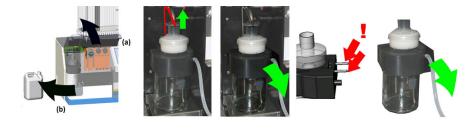


Cleaning



- A. Clean all parts with hot water and a brush.
- B. Use some acid free vaseline on the screw-thread of the glass jar.

Replacing

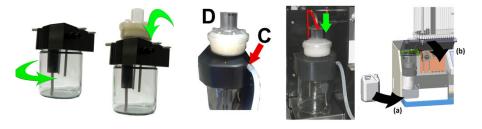

- C. A little silicon grease on the rim of separator will make the assembling and adjustment easier.
- D. If applicable replace the bacterial HEPA filter (For Maintenance Level 4: Exchange filter QWLV040002)